

# *Domo2*

## *Telephone*



RAPID GUIDE  
in English

by *John H. Sumner*

*Telefonica*

**CONTENTS**

- INTRODUCTION ..... 4
- THE TELEPHONE BUTTONS EXPLAINED ..... 5
- THE ROUND BUTTON EXPLAINED ..... 6
- TELEPHONE SETTINGS ..... 7
- HANDSET ADJUSTMENTS..... 8
  - Date and Hour ..... 8
  - Audio ..... 8
  - Display Contrast ..... 9
- MAKING A CALL ..... 10
  - Manually Dialling ..... 10
  - From the Phone Book ..... 10
  - Re-dialling ..... 10
  - Dialling a Recent Caller ..... 10
- VIEW RECENT CALLERS ..... 11
  - Viewing a Single Recent Call or All Calls ..... 11
  - Delete Recent Call Records ..... 11
- THE PHONE BOOK (Agenda) ..... 12
  - Store New Contact ..... 12
  - Delete a Contact ..... 12
  - Contact Groups ..... 13
- THE ANSWERING MACHINE & LANGUAGE ..... 14
  - Switching the Answering Machine On or Off ..... 14
  - Receiving Messages ..... 14
  - Listening to Messages ..... 14
  - Changing the Language ..... 15
- VIEWER MENU SYSTEM ..... 16
  - Manual Credits and Copyright ..... 18

## INTRODUCTION

A manual in Spanish is supplied with the Domo2 Messages Telefonica telephone handset, however, this Rapid Guide in English for the Domo2 has been produced by John H. Sumner for the benefit of those who struggle to understand Spanish. Additional copies of this Rapid Guide is available to download free from the author's web site - <http://sumgen.com>.

This Rapid Guide does not attempt to duplicate all the information in the Spanish manual, but just to provide help on the most needed options.

---

The new Domo2 from Telefonica is very different from the original DOMO telephone. It uses a combination of less buttons and a bigger viewer to provide most of the options available, which are accessed via a system of menus. While this may have many advantages, it does require the user to remember how to access these options - hence the 64 page Spanish manual that comes with the telephone.

The Domo2 can be configured to display the Viewer options in Castilian, Catalan, Euskara, Galego and Valencian languages, but unfortunately not in English, so this Rapid Guide is intended to help you find your way around the most-used Domo2 options in English.

## THE TELEPHONE BUTTONS EXPLAINED

First, it is necessary to understand the buttons on the handset in order to make full use of the options available.



Go back a character, Erase & Cancel

Flash

Steps through Menus and Accepts

Round Button - see page 6

Switches on/off Microphone/ Speaker

Allows hands-free conversation

Direct access for Menu Adjustments

View list of calls

Indicator Light


Hold down for message in the Answering Machine

Change the way you edit messages, date & time

Call buttons for Emergencies, Information and Telefonica Assistance

## THE ROUND BUTTON EXPLAINED

The round button in the centre of the handset provides many options, most of which depend on that shown in the viewer.

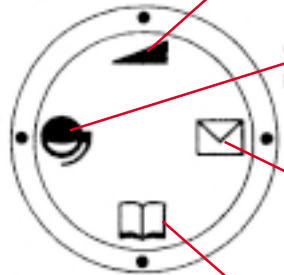

This takes you back to a previous option or list. You can scroll up in text messages. You can change caller during a multi-call conversation or call-waiting. You can increase the volume when that mode is selected.


This option moves the cursor left when editing text messages, date and time. It also duplicates the red, blue and green service buttons.

This option moves the cursor to the left when editing messages and telephone contacts list. It is also a short-cut to receive text messages and/or incoming calls.

This option takes you back to previous option or list. You can scroll up in text messages. You can access your list of telephone contacts. You can decrease the volume.

## TELEPHONE SETTINGS

On the Domo2, the Viewer is used to indicate the status of your actions.

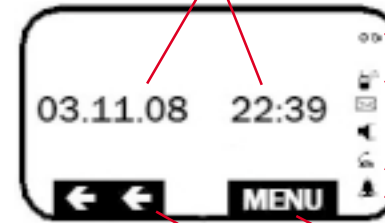

Displays Date & Time when no other message is displayed.

Displayed when the Answering Machine is activated and blinks when there is a message to listen to.

Displayed when an unanswered call was received.

Displayed when there is a message(s) to be read.

Displayed when telephone is used hands-free.

Displayed when telephone is busy.

Displayed when Alarm is activated.

This indicates that Menu options are available.

Indicates when you can retrace your actions.

## HANDSET ADJUSTMENTS

### Date and Hour

With the handset down, press the **n** button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Ajustes' and press the **n** button to accept. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Fecha y Hora' and press the **n** button. Enter the date as a string of 6 numbers - eg.170708 (without separators). Press the **n** button when complete. Enter 4 numbers as the time - eg.1626 (without separators). Press the **n** button to complete. Press the 'Left Arrow' button several times to return to the basic display. *Some users find that the Domo2 does not maintain the correct date and time, where the handset is connected to the Telefonica system via a radio connection.*

*Remember, if you have the caller Identification service enabled, when receiving a call, the hour and date display will be adjusted automatically.*

### Audio

With the handset down, press the **n** button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Ajustes'. Press the **n** button to accept. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Audio' and press the **n** button to accept.

You can access various Audio settings by pressing the **n** button to select, and the 'Up' and 'Down' button (ramp and book icons) to choose the settings for -

'Volume'  
'Melody'  
'Advising tones'.

### Display Contrast

With the handset down, press the **n** button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Ajustes'. Press the **n** button to accept. Use the 'Up' and 'Down' buttons to display 'Contraste'. Press the **n** button. Now use the 'Up' and 'Down' buttons to select one of the contrast settings and press the **n** button to complete.

## MAKING A CALL

**Manually Dialling** Press 'Hands Free' button (speaker icon) if you don't want to use the handset. Use the keypad to enter the desired telephone number. If a mistake is made, delete it by pressing the 'Left Arrow' button.

**From Phone Book (Agenda)** Pick up the handset or press the 'Hands Free' button (speaker icon) for hands free operation. Select the contact you wish to call by pressing the 'Agenda' (Phone Book) button (book icon) followed by the first letter of the person name. If you have more than one contact starting with that initial, use the 'Up' and 'Down' buttons (ramp and book icons) to scroll through the list. When the correct contact is displayed, press the 'Hands Free' button (speaker icon) and automatic dialling will start.

**Re-dialling** Pick up the handset or press Hands Free button (speaker icon). Press the button and select the number with the 'Up' and 'Down' buttons (ramp and book icons). When the required name or number is displayed, press the 'Hands Free' button (speaker icon) and wait for automatic dialling.

**Dialling a Recent Caller** Select the MENU by pressing the 'Accept' button (n ). Next use the 'Up' and 'Down' buttons (ramp and book) to display 'Lista Llamadas'. Press the 'Accept' button (n ) and use the 'Up' and 'Down' buttons (ramp and book icons) to select the number or name of the recent caller. Press the 'Hands Free' button (speaker icon) to automatically dial.

## VIEW RECENT CALLERS

**To View a Single Recent Call or View all Recent Calls** To view received calls, first press the 'Accept' button (n ) to view the MENU. Next press the 'Up' or 'Down' buttons (ramp and book icons) until 'Lista Llamadas' is displayed. Press the 'Accept' button (n ) to accept, then use the 'Up' or 'Down' buttons (ramp and book icons) until the required recent caller is displayed.

**To Delete Recent Call Records** To use the Clear (delete) option, press the 'Accept' button (n ) followed by the 'Up' or 'Down' buttons (ramp or book icons) to select either 'Borrar registro' (to clear all numbers) or 'Numero a la Agenda' (to clear the record displayed). Press the 'Accept' button (n ) again and confirm.

## THE PHONE BOOK (AGENDA)

**Store New Contact** Press the **n** button for the menu, then 'Up' and 'Down' buttons (ramp and book icons) until 'Agenda' is displayed. Press the **n** button to accept. 'Nuevo registro' will be displayed. Press the **n** button again.

From either the Menu or the Phone Book, complete the following details, pressing the **n** button after each.

- Enter the number of new contact.
- Enter the name of the contact number.
- Select Group (if you want to).
- Enter the extension for sending text messages (if you want to).

*To enter a new contact's Name into the Phone Book (Agenda), press the number keys several times as necessary. So to display a 'C', press the '1' key 3 times. The '1' key pressed once produces a Space. The '#' key pressed 4 times gives an '&'. The '0' key displays a '.' and pressing it 7 times gives a '-'. The first letter of a Name will be upper-case followed by lower-case. To get an upper-case letter to start a second name or surname, press the "\*" key first. For all the other available characters see the User Manual.*

**Delete a Contact** Select the record to be deleted. Press the **n** button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Borrar Registro'. Press the **n** button to delete the record selected.

### Contact Groups

*(Allows you store contacts under groups such as Family, Friends, Business, etc.)*

#### Add to Contact Group -

Select the record in the Phone Book and press the **n** button for the Menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Modificar Registro'. Press the **n** button to accept. Use the 'Up' and 'Down' buttons (ramp and book icons) to select the group most suitable for the contact and press the **n** button to accept.

#### Changing to a Group Member -

Select the record in the Phone Book and press the **n** button for the Menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Modificar Registro'. Press the **n** button to accept. Press the **n** button against each item you make changes to, or to leave the record unchanged.

## THE ANSWERING MACHINE & LANGUAGE

**To switch on (Activar)** Press the **n** button.  
Press the book icon on the round key until 'Serv.de Red' is displayed. Press **n** key.  
'Contestador' will be displayed. Press the **n** key.  
'Activar' is displayed. Press the **n** key.  
*A cassette icon should now be displayed in the top right corner of the Viewer. This indicates the answering machine is switched on. This icon will blink when a message or messages are waiting to be listened to.*

**To switch off (Desactivar)** Press the **n** button.  
Press the book icon on the round key until 'Serv.de red' is displayed. Press **n** Key.  
'Contestador' will be displayed. Press the **n** key.  
Press the book icon if necessary until 'Desactivar' is displayed.  
Press the **n** Key.

**Receiving Messages** If you have switched the Answering Machine on, and you don't answer a call during the first 5 rings, the answering service will automatically start, inviting your caller to leave a message.

**Listening to Messages** Listening to recorded messages can be done at any time. Simply lift the receiver and after a few seconds the dialling tone will stop and you will be told how many new messages there are. Then you will be told the day and time of the first message, and it will then be played. At the end of the message the system will stop until you select one of these options -

Press 1 - to hear the message again.  
Press 2 - to store the message.  
Press 3 - the erase the message.

The system will then move onto any other messages, one at a time, offering the same options for each.

### Changing the Language

When you have listened to all the 'new' message, you will be offered any messages you stored previously. For each of these you have to press the 1, 2 or 3 keys as above.  
When you have listened to all the messages -

Press 0 - to exit the system, or  
Press 1 - to change personal options (including the language)

After having listened to any messages, press the 1 key to change personal settings.

You will be asked to select one of these options -

Press 1 - To change your message.  
Press 2 - To change your access code.  
Press 3 - To activate the advice time.  
Press 4 - To change language.

Press the 4 key and you will be asked to enter your access code. Unless you have changed it, this will be 0000.

To choose the required language -

Press 1 - to select Spanish.  
Press 2 - to select regional Spanish languages.  
Press 3 - for other languages.

Assuming you don't want a Spanish language, press 3 for 'other languages' and then -

Press 1 - to select English.  
Press 2 - to select French.  
Press 3 - to select German.

Finally -


Press 1 to confirm your choice, or  
Press 2 to go back to make another choice.

Replace the receiver. Your message service should now be in your chosen language.

The procedure to change language (as listed above) has been checked with Telefonica a number of times, and should be correct.

## VIEWER MENU SYSTEM

This chart shows the order in which the menu system is displayed in the Viewer.  
 (Each box in the chart shows the wording displayed, with the English translation underneath.)

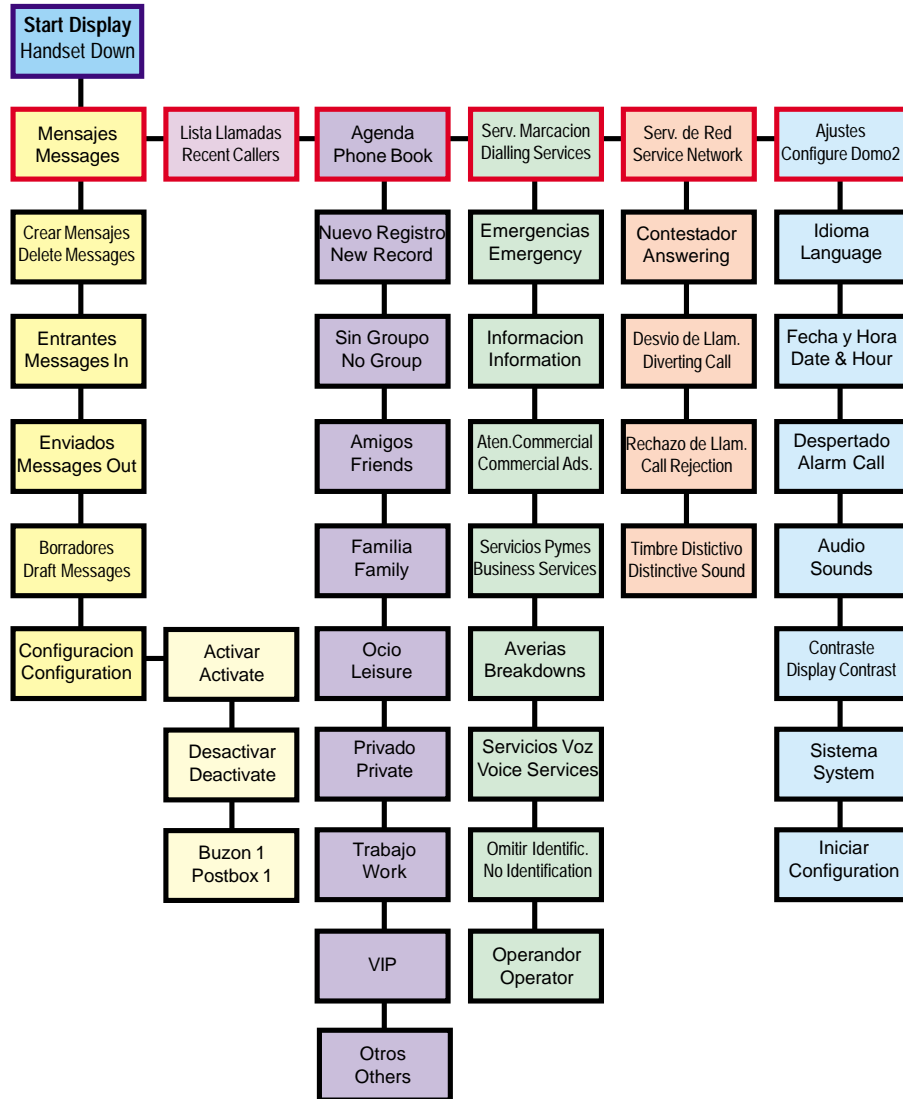

*For your Notes -*

---

The Telefonica logo is displayed in a white, cursive font within a dark grey rectangular box. A thin white horizontal line is positioned below the text. The box is centered on the page.

This Rapid Guide was written and typeset by John H. Sumner and contains translated extracts from the Spanish version of the Telefonica Domo2 manual. No responsibility can be taken for options or services provided by Telefonica which do not operate as expected or intended.

**COPYRIGHT NOTICE**

The author gives permission for the free distribution of this Rapid Guide in PDF format, providing all pages are included, none are added, and that no changes have been made to them.